

recorded one until the motor jogs. Select the transmitter/channel to add and press its programming button until it jogs, then release. Check it.

- To **DELETE** a transmitter/channel, press the programming button on an already recorded one until the motor jogs. Select the transmitter/channel to delete and press its programming button until it jogs, then release. Check it.
- If a transmitter is **LOST**, perform the dual power cut (see below). Select a transmitter/channel to add. Press the programming button until the motor jogs **once**, then release. Check it.

#### Setting/Deleting a New Intermediate Position

- Adjust to a new intermediate position and press **STOP**. Press the **STOP** button again until the motor jogs, then release. Check it. (to access the intermediate position, press the **STOP** button while the motor is at rest).
- To **DELETE** access the current intermediate location and press **STOP**. Press the **STOP** button again for 5 seconds until the motor jogs, then release. It is now deleted.

#### Resetting the Motor

- Perform the **DUAL POWER CUT**. Disconnect power off for 2 seconds, on for 10 seconds, off for 2 seconds and then leave the power on. The motor rotates in one direction and stops.
- **Resetting to Factory Mode**. When it stops, press and hold the programming button (10 sec.) on any transmitter/channel until it jogs twice, then release. There is a pause between the jogs. Do not release the program button until the second jog is complete or you will have to start from the dual power cut again.

**IMPORTANT:** This is a quick reference guide not meant to replace the formal instructions. Please read the [formal instructions](http://www.somfysystems.com) (www.somfysystems.com) for complete information of this motor before using this guide.